

Auto-Safe Gate Assembly Instructions



* Pro Version shown

Auto-Safe Gate Assembly

Auto-Safe Gate Assembly

IMPORTANT: To avoid assembly problems follow these instructions exactly. Work Safely - Do not stand the frames upright when assembling.

Step 1 - Remove the M6 x 65mm screw and nyloc nut at A from the LHS Upper Side Safety Rail as viewed from the entry point of the platform and discard. (See illustration No. 1)

Step 2 - Align the Rear Tab of the Auto-Safe Gate Housing with hole position A in the LH Side Upper Safety Railing. Insert the longer M6 x 70mm screw supplied and tighten with a nyloc nut. (See illustration No. 2)

Step 3 - Fit the supplied U Bolt around the Upper Side Safety Rail and pass thru the holes in the Auto Safe Gate Housing. Ensure the Gate is level and tighten using the washers and nyloc nuts supplied. (See illustration No. 3)

Step 4 - Open and close the gate testing the Spring Auto Open Function and that the Gate Latch securely holds the gate in the closed position. (See illustration No. 4)



Illustration 1

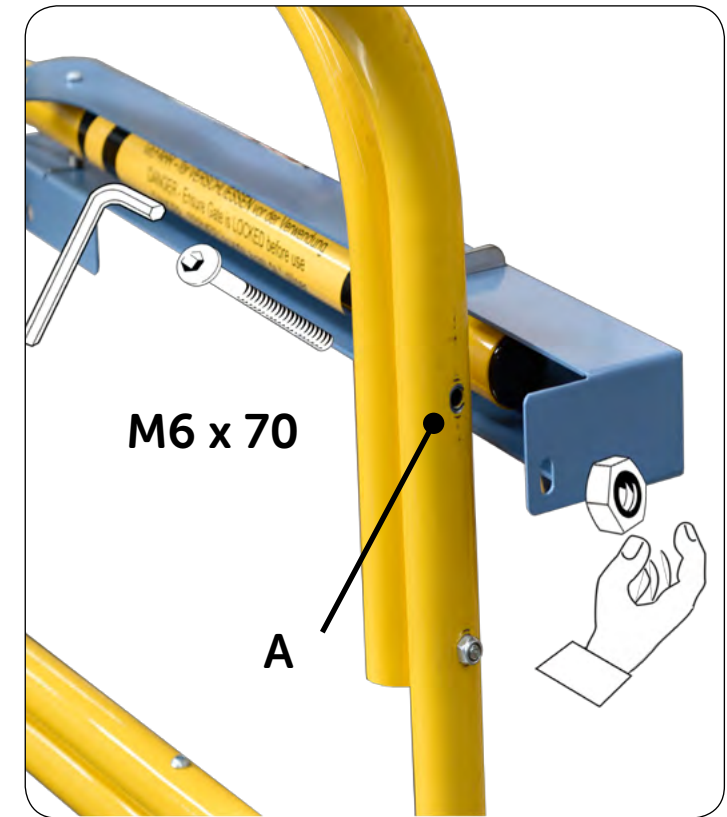


Illustration 2

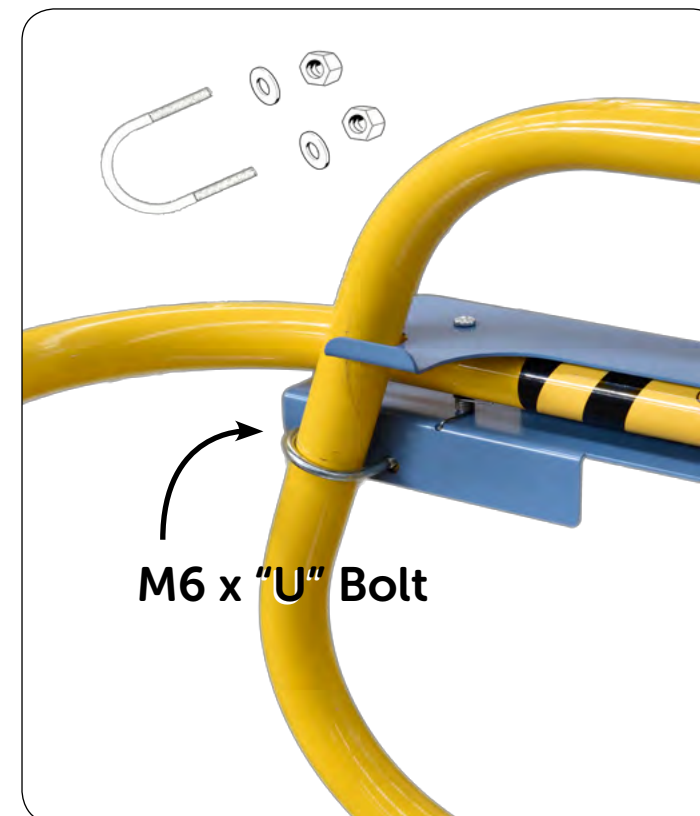


Illustration 3



Illustration 4

This completes the product assembly.